



YAMAHA

# SPECIFICATIONS



## **KEYBOARDS**

Solo: 37 keys C<sub>1</sub> - C<sub>4</sub> (3 octaves) Upper: 61 keys C - C<sub>4</sub> (5 octaves) Lower: 61 keys C - C<sub>4</sub> (5 octaves) Pedals: 25 keys C<sub>1</sub> - C (2 octaves)

#### COMBINATION

Upper: Combi. Lever, Memory 1 · 2 · 3, Preset 1 · 2 · 3 · 4, Volume, (Levers) 16, 8, 6-2/5, 5-1/3, 4, 2-2/3', 2', 1-3/5', 1-1/3', 1', Attack 4' • 2-2/3' • 2', Attack Lenath

Lower: Combi. Lever, Memory 1 · 2 · 3, Preset 1 · 2 · 3 · 4, Volume (Levers) 16, 8, 5-1/3, 4, 2-2/3, 2, 1', Attack 4' • 2-2/3', Attack Length

Pedals: Combi. Lever, Memory, Preset 1 • 2, Volume, (Levers) 16, 8, 4'

#### ORCHESTRA

Upper: Strings 1, Strings 2, Strings 3, Strings 4, Brass 1, Brass 2 Brass 3, Reed 1, Reed 2, Vocal, Spice 1, Spice 2, (Controls) Preset Vibrato, Touch Tone, Volume

Lower: Strings 1, Strings 2, Strings 3, Brass 1, Brass 2, Brass 3, Reed, Vocal 1, Vocal 2, Spice 1, Spice 2, Cosmic (Controls) Preset Vibrato, Touch Tone, Volume

## SPECIAL PRESETS

Upper: Piano, Harpsichord, Celesta. Vibraphone, Marimba, Mandolin, Banjo, Jazz Guitar, Brass 1, Brass 2 Cosmic (Controls) Touch Tone, Volume

Lower: Piano, Electric Piano, Harpsichord, Harp, Acoustic Guitar, Jazz Guitar, Brass 1, Brass 2, Cosmic 1, Cosmic 2, Cosmic 3, (Controls) Touch Tone, Volume

## **CUSTOM VOICES**

Upper/

Lower: Flute, Oboe, Clarinet, Saxophone, Trumpet, Trombone, Violin, Jazz Guitar, Hawaiian Guitar, Bass Guitar, Vocal, Cosmic 1, Cosmic 2, Cosmic 3, Cosmic 4, (Controls) Preset Vibrato, Touch Vibrato, Touch Tone, Volume

Pedals: Contra Bass 1, Contra Bass 2, Contra Bass 3, Contra Bass 4, Tuba, Electric Bass 1, Electric Bass 2, Electric Bass 3, Vocal, Cosmic. (Controls) Brilliance, Volume

#### SOLO

Piccolo, Flute, Oboe, Clarinet, Saxophone, Trumpet 1, Trumpet 2, Horn, Trombone, Violin, Cello, Jazz Guitar, Harmonica, Vocal, Cosmic 1, Cosmic 2, (Controls) Detune, Coupler, Transposition (Down, Normal, Up), Preset Vibrato, Touch Vibrato, Touch Tone, Brilliance, Volume, Slide Control

## **ENSEMBLE**

Upper Combi., Upper Orches., Upper Special, Upper Custom, Lower Combi., Lower Orches., Lower Special, Lower Coupler: Lower to Upper, Upper to Lower

## **EFFECTS · CONTROLS**

(Switches) Upper Sustain Sustain: (Knee), Lower Sustain (Knee), Pedal Sustain.

(Controls) Upper, Lower, Pedal Symphonic: Celeste, Symphonic, Upper

Combi., Upper Orches.,

Lower Combi., Lower Orches. Tremolo: Chorus, Tremolo, Upper

Combi., Upper Orches., Lower Combi., Lower Orches., Tremolo Speed Reverb, Glide (Foot Switch Control), Dynamic Range Control (Solo, Upper, Lower, Pedal),

(Combination) Program Set, Response Fast, Timbre Variation

Vibrato Presetter: Set, Lever, Player, Preset, (Controls) Touch Depth, Delay, Depth, Speed, (Indicator) Solo, Upper Orches., U/L Custom, Lower Orches...

Pedals

## **AUTO RHYTHM**

Pattern Selectors: March, Waltz, Ballad, Swing, Bounce, Slow Rock, 8 Beat 1, 8 Beat 2, Tango, Latin 1, Latin 2, Bossanova, Samba, Latin Rock, Disco, 16 Beat,

Variation 1 • 2 • 3 • 4
Break Variation: 1 • 2 • 3 (16 x 3 patterns), Break, Break Variation (Foot Switch Control)

Auto Variation: Normal, 4 Bar, 8 Bar, 16 Bar Rhythm Sequence Programmer: Program 1 · 2 · 3 · 4 (64 Bars x 4), On, Record, Blank, End, Back, Forward

Digital Display: Tempo, Bar/Beat Controls: Synchro Start, Start, Tempo, Volume, Balance, Tempo Indicator Lamp, Rhythm Stop (Foot Switch Control)

## **AUTO ARPEGGIO**

Pattern Selectors: 1 · 2 · 3 · 4 · 5 · 6 · 7 · 8 (16 x 8 patterns) Voice Selectors: Piano, Harpsichord, Strings, Harp, Volume (control)

## RHYTHMIC CHORD

Pattern 1: Piano, Jazz Guitar, Solid Guitar. Phaser (effect), Volume (control)

Pattern 2: Brass, Jazz Guitar, Solid Guitar, Phaser (effect), Volume (control)

## **AUTO BASS/CHORD**

Normal, Custom A.B.C., Multi Bass (Normal, 1, 2, 3), Lower Memory, Pedal Memory

## REGISTRATION MEMORY

Preset buttons: 1 • 2 • 3 • 4 • 5 • 6 • 7 • 8 Controls: Memory, Cancel, Disable, Slider Drive

Registration Pack: Read, Confirm, Write (Indicator) Memory Ready, Error

#### MAIN CONTROLS

Manual Balance, Master Volume, Expression Pedal, Expression Pedal Display (On, Bright, 10 position), Reset, Knee Lever, Foot Switch, Power Switch, Lights (Dim, Off, Bright), Pitch Control

#### OTHER FITTINGS

Yamaha tone cabinet connectors Left x 2 • General x 2 • Right x 2 (13 pins), Leslie tone cabinet connector (11 pins), 10 Ch Out connectors x 2 (11 pins), Exp. In jack, Stereo Headphone jack, Registration Pack, Panel Lights, Music Rest, Matching Bench

# CIRCUITRY

Solid State (incl. LSIs and ICs) Power Consumption: See Electone nameplate

Power Source: 50/60Hz AC

# **DIMENSIONS**

Cabinet: 150(W) x 71(D) x 112(H) cm

(59" x 28" x 44")

105(W) x 41(D) x 64(H) cm Bench: (41-1/3" x 16" x 25-1/4")

#### WEIGHTS

Cabinet: 230kg (507 lbs.) Pedals: 25kg (55 lbs.) Bench: 70kg (154 lbs.)

## **FINISH**

Ivory · Urethane Finish

# **TONE CABINET SPECIFICATIONS TX-1**

Three discrete channels of amplification are provided. The channels are: Left, center and right. The left and right channels are designed to reproduce the mid and high frequency ranges. The center channel incorporates an electronic crossover, permitting bi-amplification of the sounds routed to the center channel. One amplifier handles the low frequencies, while the other handles the mid and high frequency ranges. The left and right channel speakers are mounted on angled baffles (30°) to provide optimum dispersion of sound. The center channel faces forward, with the low frequency speaker (woofer) being mounted in a sealed enclosure for improved bass response. The TX-1 does not include either electronic or mechanical sound animation systems.

Amplifier power output (RMS)	Left	Center	Right
	70W —	70W 100W	70W —
Speakers: Total 10 Tweeter (horn type)	2 5 cm (2")	2 5 cm (2")	2 5 cm (2")
Mid Range (cone type)	1 20 cm (8")	1 20 cm (8")	1 20 cm (8")
Woofer (cone type)	_	1 38 cm (15")	_

Input: Via 13 pin plug and cable assembly attached to the TX-1

Output Socket: 13 pin socket provided for connecting an additional TX-1 tone cabinet

Additional Controls etc.: Volume control (controls TX-1 only) Power switch for Remote/on Pilot lamps (2)

Dimensions	Width 828 mm 32½"	Height 899 mm 35½"		Depth 665 mm 261/4"
Weight: 130 kg (286 lbs.)	Power Consumption: 360W (USA)		Finis	sh: Ivory Enamel



# "LIVING" SOUND

Yamaha's all new FAM System, which stands for Frequency Modulation and Advanced Memory. is a sophisticated integration of state-of-the-art technologies, which makes Yamaha organs phenomenal performers in every respect. But, as with any musical instrument, the single most important element is tone quality. And here superlatives pale beside the unprecedented thrill you will experience when playing or hearing a live performance of the magnificent FX-1 Electone.

Authorized Yamaha Electone Retailer

**ELECTONE...THE BEST-SELLING** ORGAN IN THE WORLD TODAY

SINCE 1887



International Corp., Box 6600, Buena Park, Calif. 90622 ELECTONE is a registered trademark of Nippon Gakki Co., Ltd.

<sup>\*</sup>Specifications subject to change without notice.